

HANDLE

STRAIGHT H-270 Wood

No.15994



STRAIGHT H-330 Orange

No.15973



STRAIGHT H-300 Wood

No.15990



PISTOL H-145 Green

No.15996



STRAIGHT H-300 Red

No.15952



PISTOL H-126 Blue

No.08996



STRAIGHT H-300 Blue

No.15953



PISTOL H-126 Red

No.08991



STRAIGHT H-300 Black

No.15971



PISTOL H-126 SH

No.15278



STRAIGHT H-150

No.15958



PISTOL H-145 Orange

No.08994



STRAIGHT H-240 Wood SH

No.08992



PISTOL H-126 Yellow

No.08993



STRAIGHT H-330 Wood

No.15991



BLADE REPLACEMENT

Caution Please wear hand protection or wrap the blade in a cloth to prevent injury.

替刃 Hook-Fit

 
AUTHENTIC JAPANESE SAW series

UTILITY SAW series

PRUNING H-240/PRUNING H-210

Detachment


- Tap the handle end with the saw teeth facing upward to loosen the blade.
- Pull the blade out of the back metal.

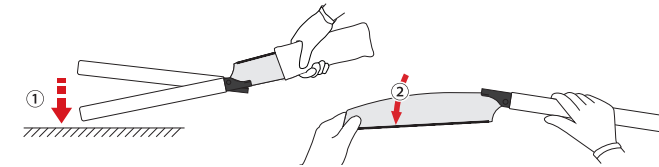

※Never detach a blade by knocking the back of the blade toe.

Attachment

 - Insert the blade into the back metal and hook onto the hook point.
- Push the blade into the gap of the back metal as a temporary lock.
- Tap the handle end gently with the saw teeth facing downward to fix the blade firmly.

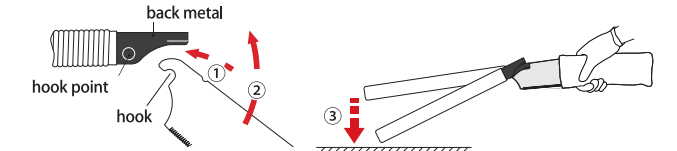

※Never hit hard at once. Tap many times.

 
替刃 Hook-Fit

V HANDY H-200 / V H-265

△ Unfold the blade and make sure that the back metal is locked before replacing a blade.

Detachment


- Tap the handle end with the saw teeth facing upward to loosen the blade.
- Pull the blade out of the back metal.

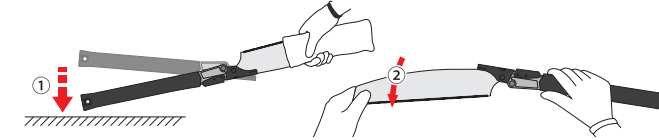

※Never detach a blade by knocking the back of the blade toe.

Attachment

 - Insert the blade into the back metal and hook onto the hook point.
- Push the blade into the gap of the back metal as a temporary lock.
- Tap the handle end gently with the saw teeth facing downward to fix the blade firmly.

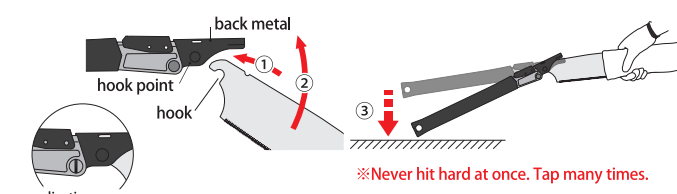

※When opening and closing, adjust the tightness with the adjusting screw for looseness.

 
替刃 Hook-Fit

DOZUKI BACKSAW series

※This applies only to DOZUKI BACKSAW series.

Detachment


- Tap the blade end with the saw teeth facing upward to loosen the blade.
- Pull the blade out of the long back metal.

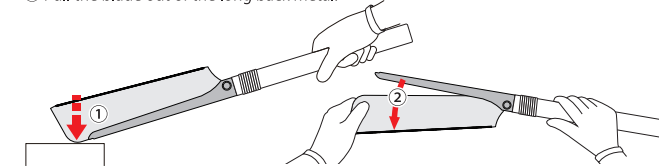

※Never detach a blade by knocking the back of the blade toe.

Attachment

 - Insert the blade into the long back metal and hook onto the hook point.
- Push the blade into the gap of the long back metal as a temporary lock.
- Tap the long back metal gently with the saw teeth facing upward to fix the blade firmly.

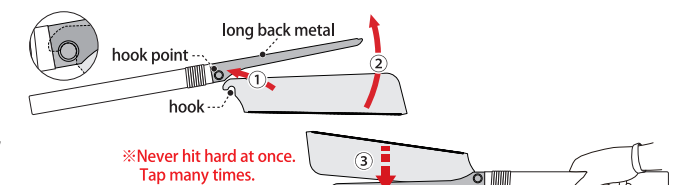

※Never hit hard at once. Tap many times.

替刃 Screw-Fit


ZETSAW DIY series

FS/PRUNING SL

RYOBA 250


Detachment

 - Loosen the screw with a coin or a screwdriver.
- Pull the blade out from the handle. (Do not remove the screw.)

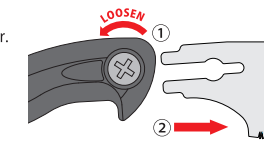

Attachment

 - Insert the blade.
- Cover the end slit of the blade and tighten the screw lock.
- Make sure the screw is tight and the blade doesn't rattle.

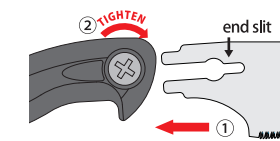


替刃 Screw-Fit

COMPASS series


Detachment

 - Loosen the screw with a coin or a screwdriver.
- Pull the blade out from the handle. (Do not remove the screw.)

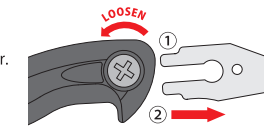

Attachment

 - Insert the blade.
- Cover the hole of the blade and tighten the screw lock.
- Make sure of the loose screw and the rattling blade.

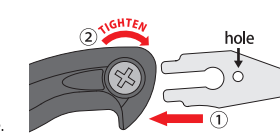


替刃 Pin-Fit

TUCK IN FOLDING SAW series

Detachment

 - With the blade folded in, remove the bolt and the washer after loosening the bolt with a coin, etc.
- Pull the nut out.
- Remove the blade.

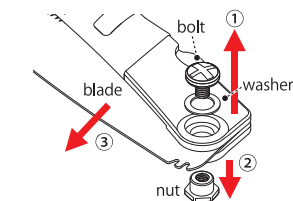

Attachment

- Insert the blade into the handle, ensuring the holes are aligned.
- Insert the nut.
- Insert the washer and bolt, ensure the blade can move smoothly before tightening the bolt.

